


ETOILE

corner sofa

Insert the screw into the metal bracket (in accordance with the sequence 1;2;3). Then tighten the screw to a depth of approx. 15 mm. Then screw the bolts (screw gradually), keeping attention not to damage the surface of leg.

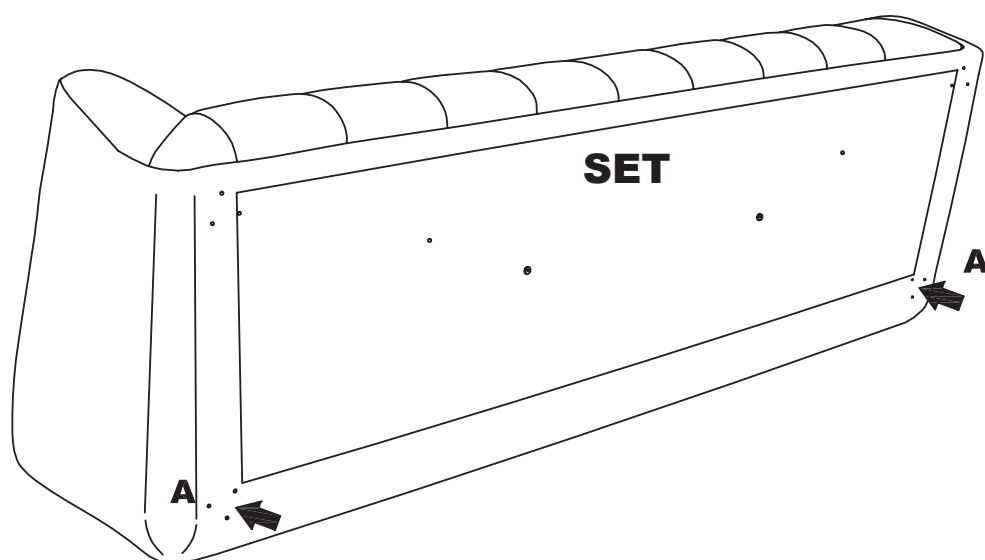

"Step 1"

x2

Hex key "4"





x6

"A"



A

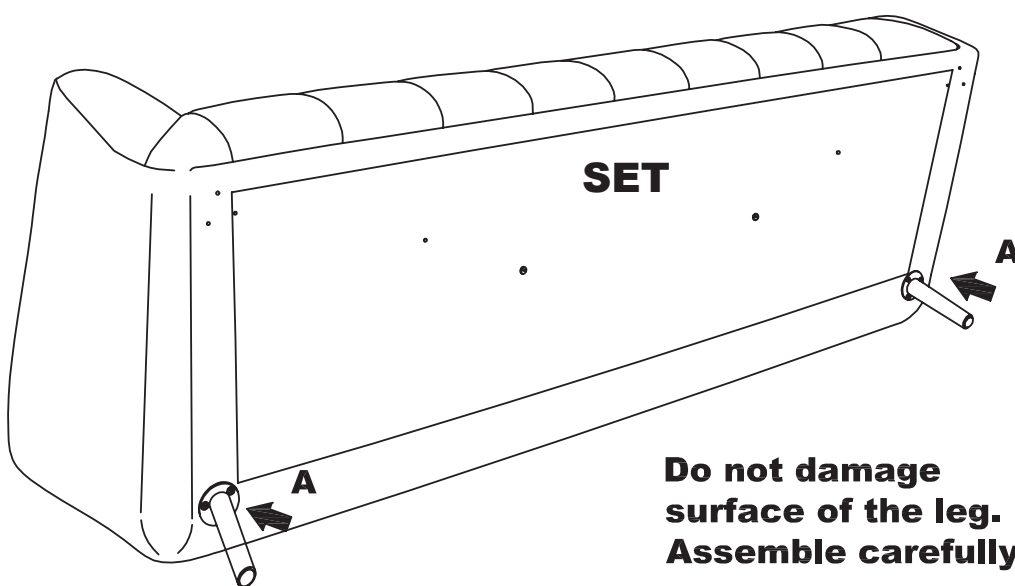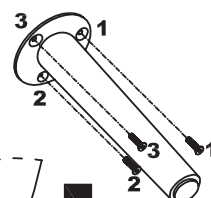


Do not damage surface of the leg. Assemble carefully.

Check attachment screws

1

"Step 2 for front wood leg"

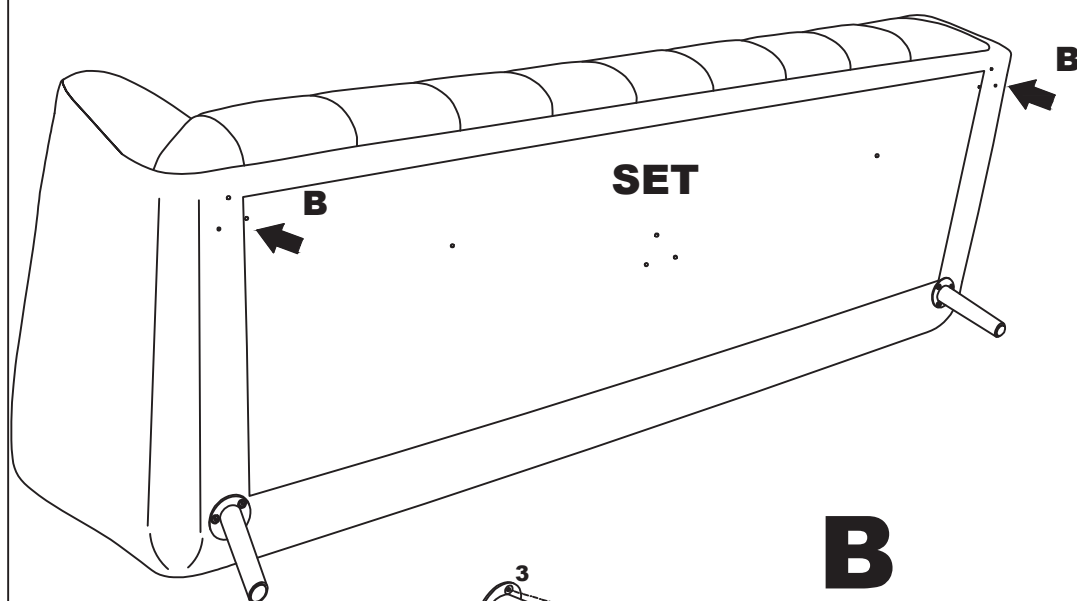

"Step 2"

x2




x6





Hex key "4"



B

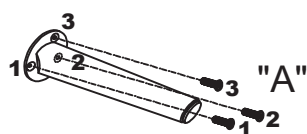

Hex key "4"

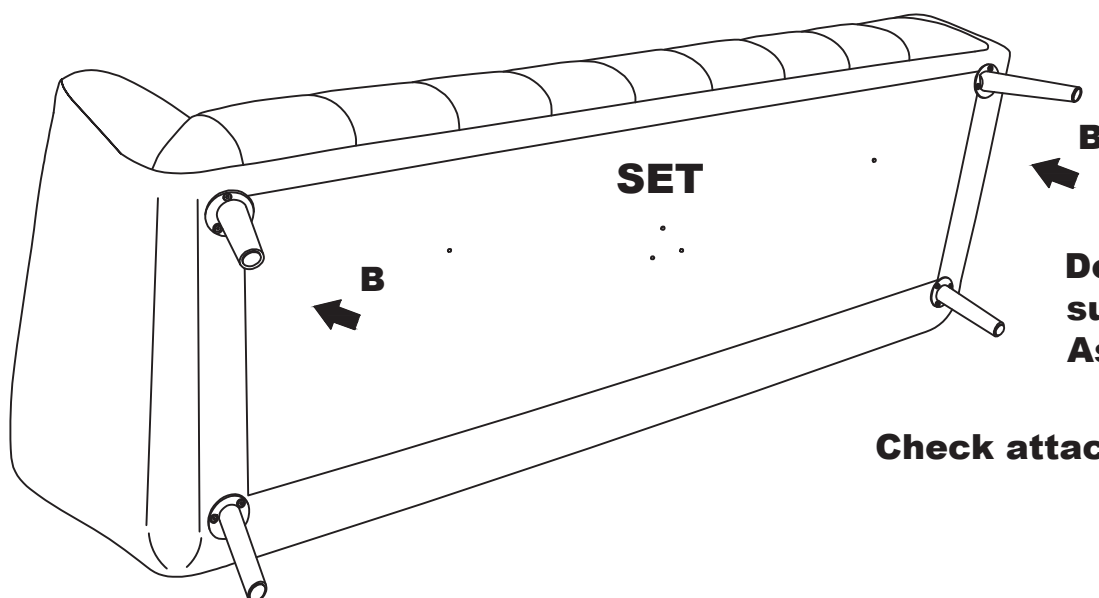
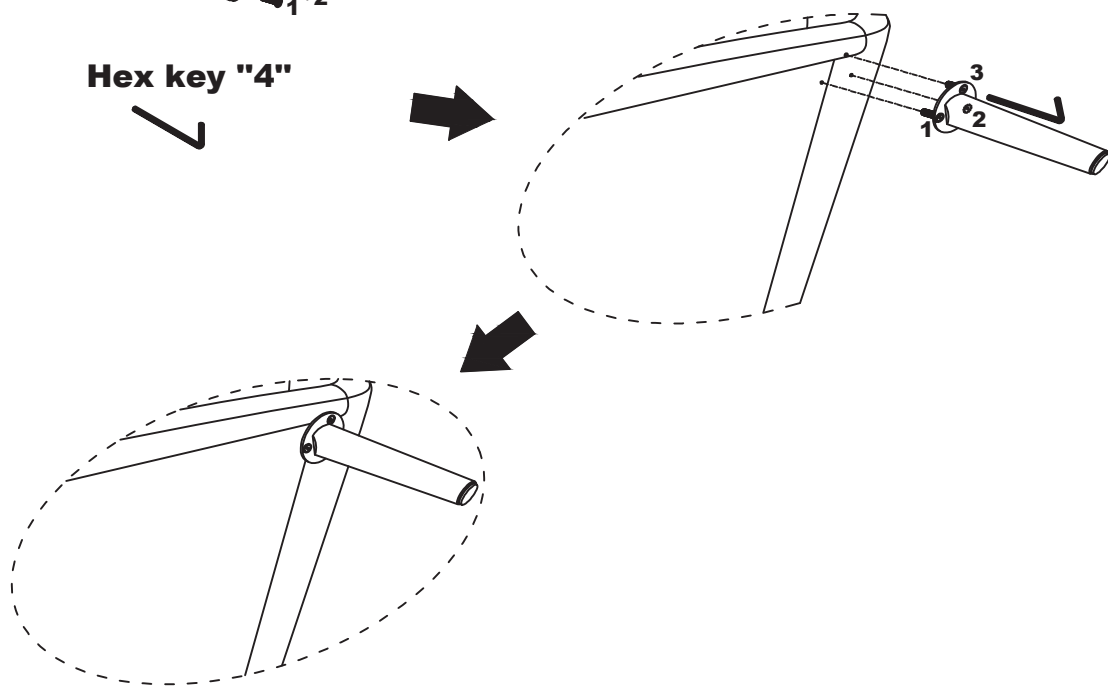


**Do not damage
surface of the leg.
Assemble carefully.**

Check attachment screws

2

**"Step 1&2 for CHG
the same as in the SET "**

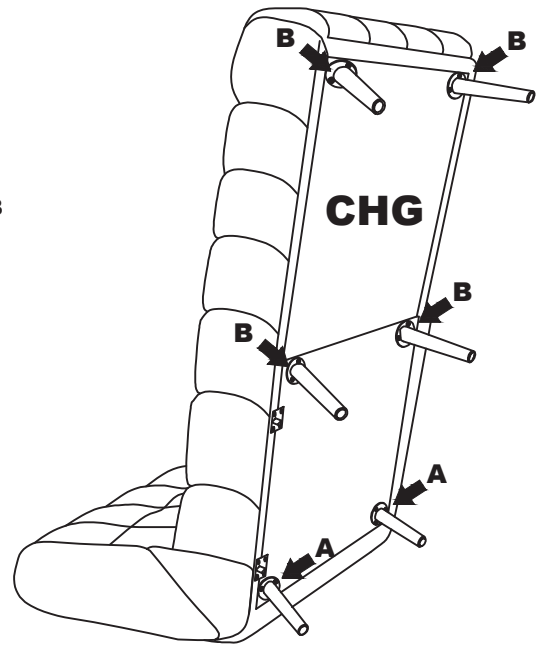
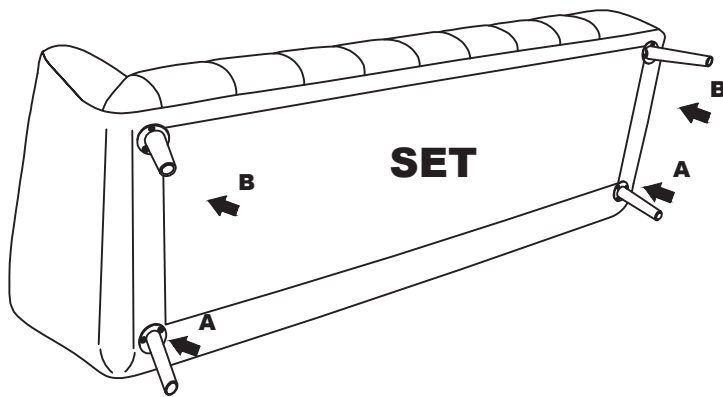


**"Step 3 for SET & CHG"
ROTATE**



**Turn the modules after mounting legs.
By using at least two persons.**

"Step 4 for SET + CHG"

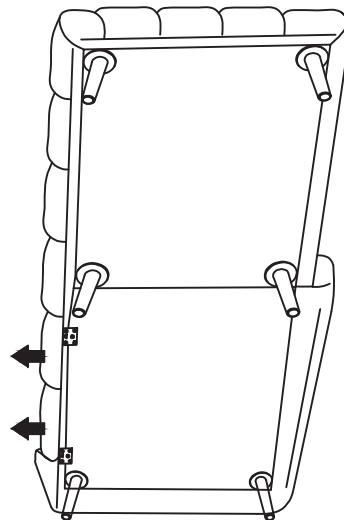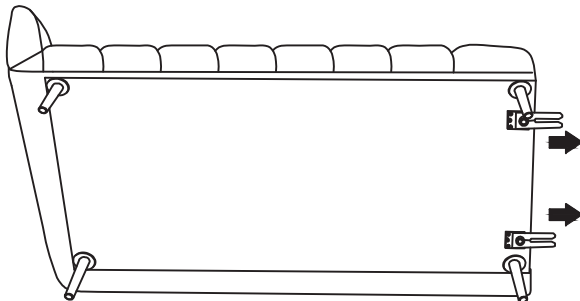

ROTATE



**Turn the modules and connect them together
By using at least two persons.**

